


USER INSTRUCTIONS

Electrastream control box user guide

Display

The arrows on the display will point to what they are referring to.

For example  = Arrow pointing at pump, pump on.

 = Arrow not above pump, pump off.

Programming the time and date

- Press set (N.B If no buttons are pressed within 10 seconds the screen will go back to normal)

-Press the up arrow or down arrow to scroll through the days of the week.

-Once set, press the boost button once so that the line moves under the hours. Use the arrows to move through the numbers.

-Once set, press the boost button once again so that the line moves under the minutes. Use the arrows to move through the numbers.

Programming the setting times


-Scroll through the settings to START 1 by pressing set twice.

-Then use the up and down arrows to set the time pressing set to move on to the next START or STOP times.

Setting the TARGET temperature

-Scroll through the settings to TARGET by pressing set until TARGET is displayed to change the temperature to the suggested 65 degrees use the up and down arrows.

Using your control box with a room thermostat

 Indicates that the room thermostat that you use to adjust
THERM the room temperature is on and calling for heat. (If this is not showing then the thermostat needs to be turned up to activate the heating)

Levels of heating

The heating and hot water are heated by three elements shown on the control panel as HEAT 1, HEAT 2, HEAT 3. The elements will come on in a rotating order so not to cause wear on a specific element, shown as on when there is an arrow underneath it.

Using the boost setting

The boost setting can be used to bring the heating and hot water on when it is permanently put to 'OFF' or is set at the time to 'OFF', on its pre-programmed settings. This setting can be used, for example during unusually 'cold snaps' during the summer or an occasion when you wouldn't normally be in the property and are.

Over riding the pre-programmed setting

When the pre-programmed setting is activated 'AUTO' will show under hot water/heat. To over ride the original settings you can use the up arrow to change the hot water mode or the down arrow to change the heating. You however can't have the heating on if the hot water is off.

ONCE PROGRAMED THERE SHOULD BE NO NEED TO CHANGE THE SETTINGS UNLESS CHANGING THE CLOCK OR ECONOMY TARRIFS.